

OUTDOOR LIVING



HDPKG-2318

Blue Sky can provide elevated ambience, quality and safety to your outdoor living space. Our products are designed to create a practical space to bring people together. Whether you're using Blue Sky products to roast s'mores in your backyard, enjoy a beach bonfire, assist at your tailgate or accompany you on a camping trip, you can rely on their durability and performance. Thank you for your purchase of this Blue Sky park style grill.

CONNECT WITH US

www.blueskyoutdoorliving.com





@blueskyoutdoorliving

Fill in the following information and retain this manual for future reference:

		_	_	_		(a)	
Г	Ⅵ	Ю	ı,	⊢.	1 (9	۱٠
	•	\sim	\mathbf{L}	_	_	-	٠.

DATE OF PURCHASE:

PLACE OF PURCHASE:

RECEIPT NO:



HDPKG-2318

HDPKG-2318

23" Park Style Grill 22.5" L x 15.7" W x 49.2" H 57.1 cm L x 39.9 cm W x 125 cm H

FOR YOUR SAFETY

PLEASE READ AND UNDERSTAND ALL SAFETY RULES BEFORE ASSEMBLING AND USING THIS PARK STYLE GRILL. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN A HAZARDOUS FIRE CAUSING PROPERTY DAMAGE OR PHYSICAL INJURY.

RULES FOR SAFE OPERATION

CAUTION: FOR OUTDOOR USE ONLY. DO NOT USE INDOORS.

- Use on a hard, compact surface such as packed dirt.
- For adult use only do not allow children to use the grill.
 Keep children and pets away from the grill while it is in use.
- Use the grill on stone, dirt or sand only.
- Do not use on lawns, wooden decks, concrete or asphalt.
- Do not use under a patio roof, low hanging branches, trellis, or overhangs of any kind including covered porches.
- Do not use in windy conditions.
- · Do not leave fire unattended at any time.
- Care should be taken to make sure all combustible material is far enough away from the fire to not ignite.
- Always use in accordance with all applicable local and state fire codes.
- Exercise the same precautions you would with any open fire.
- Do not wear flammable or loose clothing when tending an open fire.
- Avoid touching surfaces, as they will be extremely hot.
- · Assure fire is completely extinguished before leaving.
- Any modifications to this appliance may be dangerous and are not permitted.


HELPFUL HINTS

- Turn grill slowly to avoid rolling the food off the grill.
- Be cautious, as the grill will be hot when in use. Use hand protection.
- Do not place the grill in an area where it could be easily tripped over.
- The park style grill should be cleaned periodically using hot, soapy water.
 Use a wire brush, steel wool or a scouring pad to remove stubborn or loose spots.

PARTS LIST

UNPACK PARTS, MAKING SURE ALL PIECES ARE PRESENT BEFORE ATTEMPTING TO ASSEMBLE.

REF	QTY	DESCRIPTION
Α	1	Grill Box
В	1	Top Post Section
С	1	Bottom Post Section
D	1	Locking Pin

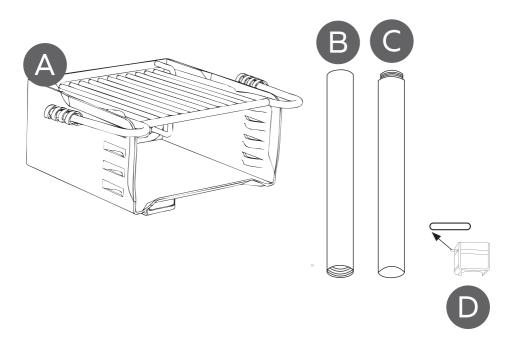

ASSEMBLY

STEP 1

Remove the plastic cap from the bottom post section [C]. Screw the top post section [B] onto the bottom post section.


STEP 2


Using a post hole digger, make a hole in the ground that is a minimum of 12" (30.5 cm) in diameter and 36" (91.5 cm) deep. Fill the hole with concrete. Insert the assembled post into the concrete with the top end 26" (66 cm) above ground level and plumb the post vertically. Allow the concrete to cure before installing the grill box.

NOTE: Local soil conditions may require a larger footing.

STFP 3

Align the holes in the swivel mechanism of the grill box over the holes in the top of the post. Insert the locking pin through the holes, leaving an equal length of pin protruding from each side of the swivel mechanism. Rotate the grill box one complete revolution. The locking pin will be bent and drawn into the swivel mechanism to lock the grill box onto the post.

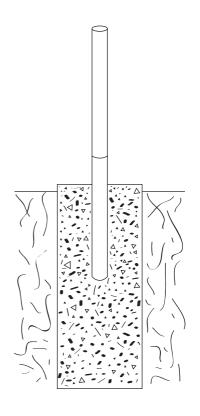

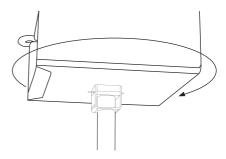



OUTDOOR LIVING



Quality Craft
Surrey, BC, Canada V3S 5N4
service@blueskyoutdoorliving.com
1-800-459-4409
(Monday to Friday, 8:00 am–4:30 pm, CST)

Made in China BKOLPSG-02/19