



ELECTRIC SCOOTER MANUAL







One look at the unique aerodynamic design and high end appearance of the Bugatti electric scooter can tell you that this is not just your average basic scooter.

Fabricated with the everyday consumer in mind, it has a sleek yet functional folding design and is available in 3 colors: Agile Bleu, Silver and Black.

Lightweight at only 35lbs, the scooter is constructed with a magnesium alloy frame which allows for easy transport if you live in a high rise or to be taken into a home or office for storage and safekeeping.

Users can also benefit from its large LED visible screen which displays trip mileage, speed, mode, battery life, dual turn signals and headlights. It has a weight capacity of up to 242lbs and rides at a maximum velocity of 18.6MPH.

The Bugatti electric scooter surely will not disappoint. Like all its products, Bugatti prioritizes high quality and front-line technology as the leading attributes of its peerless creations.





# ELECTRIC SCOOTER

Agile Bleu









# ELECTRIC SCOOTER Silver







# ELECTRIC SCOOTER Black









# TABLE OF CONTENTS

- 1. FUNCTIONS
- 3. DASHBOARD FUNCTIONS
- 5. FEATURES
- 7. ASSEMBLING THE DEVICE
- 9. OPERATING THE DEVICE
- 11. CHARGING THE DEVICE
- 13. FOLDING MECHANISM
- 15. TRANSPORT THE DEVICE
- 17. SAFETY
- 19. OPERATE SAFELY
- 21. MAINTENANCE
- 25. PRE-RIDE CHECKLIST
- 26. SAFETY PRECAUTIONS
- 27. WARNING
- 29. SPECIFICATIONS
- 31. DECLARATION
- 33. HIGHLIGHTS
- 35. WARRANTY

# THANK YOU FOR YOUR PURCHASE

PLEASE READ ALL INSTRUCTIONS CAREFULLY
BEFORE USING AND RETAIN THIS MANUAL \*
FOR FUTURE USE AND REFERENCE.

\*THE MANUFACTURER RESERVES THE RIGHT TO MAKE CHANGES TO THE PRODUCT, AND UPDATE THIS MANUAL AT ANY TIME.

VISIT US AT BUGATTISCOOTERSNA.COM

# **FUNCTIONS**

- 1. ERGONOMIC HAND GRIPS
- 2. THUMB POWER THROTTLE
- 3. DIGITAL DASHBOARD
- 4. FRONT HEADLIGHT
- 5. FRONT REFLECTOR
- 6. I FFT BRAKE I FVFR
- 7. FOLDING STEM
- 8. FOLDING SAFETY LOCK
- 9. FOLDING SAFETY LEVER
- 10. ALUMINUM BUGATTI MACARON
- 11. FRONT MUD GUARD
- 12. FRONT WHEEL
- 13. DRUM BRAKE
- 14. KICK STAND
- 15. FOOT PAD
- 16. HOOK BUCKLE
- 17. TAILLIGHT
- 18. REAR MUD GUARD
- 19. SIDE REFLECTOR
- 20. MOTOR WHEEL
- 21. DUAL TURN SIGNAL GRIP LIGHTS
- 22. LEFT & RIGHT TURN SIGNAL MECHANISM
- 23. SIDE ILLUMINATION



# DASHBOARD FUNCTIONS

- 1. SPEED DISPLAY
- 2. SPEED UNIT DISPLAY: KM/H OR MPH. (MPH IN DEFAULT SETTING)
- 3. MILEAGE DISPLAY/TOTAL: KM OR MILES. (MILES IN DEFAULT SETTINGS)
- 4. GEAR DISPLAY: ADJUST 1ST, 2ND AND 3RD GEAR.
- 5. FRONT LIGHT DISPLAY
- 6. SCOOTER ERROR DISPLAY
- 7. SINGLE TRIP MILEAGE OR TOTAL MILEAGE SWITCH.
- 8. BATTERY POWER BAR DISPLAY
- 9. GEAR SWITCH/ MILEAGE SWITCH BUTTON
- 10. POWER BUTTON
- 11. CRUISE CONTROL

#### POWER BUTTON FUNCTIONS

LONG-PRESS OF THE POWER BUTTON: TURNS THE SCOOTER ON/OFF.
SINGLE-PRESS OF THE POWER BUTTON: TURNS THE HEADLIGHT ON/OFF.
QUICK DUAL-PRESS OF THE POWER BUTTON: TURNS THE SIDE ILLUMINATION
LIGHT, HOLOGRAM LIGHT AND REAR LIGHT ON/OFF.

#### M BUTTON FUNCTIONS

LONG-PRESS OF THE M BUTTON: SWITCHES THE TOTAL MILEAGE AND SINGLE TRIP MILEAGE.

SINGLE-PRESS OF THE M BUTTON: ADJUSTS 1ST, 2ND AND 3RD SPEED GEAR.

- 1: SPEED LIMIT MODE(9MPH)
- 2: STANDARD MODE (12.5MPH)
- 3: SPORT MODE(18.6MPH)

#### CRUISE CONTROL FUNCTION

LONG-PRESS OF THE POWER THROTTLE FOR 10 SECONDS: AUTOMATICALLY ACTIVATES CRUISE CONTROL.



# **FEATURES**



LEFT & RIGHT TURN SIGNAL MECHANISM



**ERGONOMIC HANDLE GRIPS** 



SAFETY BELL



ERGONOMIC RUBBER DECK



**DUAL TURN SIGNAL LIGHT CAPS** 



FRONT LIGHT & SAFETY REFLECTOR

# **FEATURES**



BUGATTI EB LOGO: REAR MUD GUARD



**BUGATTI MACARON LOGO** 



**BUGATTI EB LOGO:WHEEL CAP** 



BUGATTI EB LOGO: DASHBOARD



**BRAKE LIGHT** 



REAR "EB" MONOGRAM PROJECTION LOGO

# ASSEMBLING THE DEVICE

#### **ACCESSORIES**

1 USER MANUAL
5 MOUNTING SCREWS
1 ALLEN WRENCH
1 ELECTRIC SCOOTER BATTERY CHARGER CABLE
1 AUTHENTICITY CERTIFICATE CARD
1 THANK YOU CARD

#### ASSEMBLING THE SCOOTER

AFTER REMOVING THE SCOOTER FROM THE PACKAGING BOX, PLACE IT FLAT ON THE GROUND.

- 1. OPEN KICK STAND AND STABILIZE ELECTRIC SCOOTER.
- 2. CONNECT THE WATERPROOF CABLES FROM THE TOP HANDLE BARS AND THE FOLDING STEM.
- 3. CONNECT THE TOP HANDLE BARS INTO THE FOLDING STEM.
- 4. LOCK THE STEM IN UPRIGHT POSITION. A 'CLICK' SOUND INDICATES THE STEM IS LOCKED IN PLACE. SECURE USING THE FOLDING SAFETY LOCK.
- SECURE THE TOP HANDLE BARS INTO THE FOLDING STEM BY USING THE MOUNTING SCREWS AND ALLEN WRENCH PROVIDED.

#### PERFORM TESTING AFTER INSTALLATION

- 1. POWER ON INSPECTION
- 2. GEAR SHIFT INSPECTION
- 3. FRONT HEADLIGHT INSPECTION
- 4. BRAKING FORCE INSPECTION



# OPERATING THE DEVICE

#### CAUTION

NOTE: BEGINNERS LEARNING TO RIDE
AN ELECTRIC SCOOTERS ARE AT RISK OF FALLING
AND GETTING INJURED.
PLEASE WEAR A SAFETY HELMET AND
PROTECTIVE GEAR AT ALL TIMES.

#### START THE ELECTRIC SCOOTER

- 1. THE SCOOTER REQUIRES A KICK OFF TO START.
- 2. WHEN THE POWER IS ON, KEEP ONE FOOT STATIONARY ON THE DECK WHILE THE OTHER FOOT KICKS BACK ON THE GROUND. (FIGURE 1)
- 3. AS THE SCOOTER BEGINS TO MOVE IN MOTION, PLACE THE OTHER FOOT BACK ON THE DECK.
- WHEN THE SCOOTER IS STABLE, PUSH THE RIGHT POWER THROTTLE.
   (FIGURE 2)
- 5. HOLD LEFT HAND ON THE BRAKE LEVER TIGHTLY WHEN BRAKING. FRONT WHEEL DRUM BRAKE AND REAR ELECTRONIC BRAKE IS IN EFFECT SIMULTANEOUSLY. (FIGURE 3)



Figure 1. Kickstart



Figure 2. Right Power Throttle



Figure 3. Left Brake Lever

# CHARGING THE DEVICE

### CAUTION

NOTE: WHEN THE BATTERY POWER IS OUT,
CHARGE IT IN TIME TO AVOID DAMAGE TO THE BATTERY.
PLEASE UNPLUG THE CHARGING CABLE FROM THE CHARGING PORT
WHEN CHARGING IS COMPLETE.
DO NOT OVER CHARGE THE BATTERY.
DO NOT LEAVE UNATTENDED WHILE CHARGING.

# CHARGING THE ELECTRIC SCOOTER

- 1. THE CHARGING PORT CAP IS LOCATED ON THE FRONT RIGHT OF THE SCOOTER. (FIGURE 1)
- 2. OPEN THE DUST-PROOF CAP AND INSERT CHARGING CABLE INTO THE CHARGING PORT. (FIGURE 2)
- 3. A RED LIGHT INDICATES THE CHARGE IS IN PROGRESS.
- 4. A GREEN LIGHT INDICTATES THE CHARGING IS COMPLETE.
- 5. UNPLUG THE CHARGING PORT AND SECURE THE DUST-PROOF CAP.



Figure 1. Charging Port Cap



Figure 2. Open Charging Port Cap

# **FOLDING MECHANISM**

#### CAUTION

NOTE: SET THE KICKSTAND TO STABILIZE THE ELECTRIC SCOOTER
BEFORE FOLDING. LOWER THE WEIGHTED
FOLDING STEM WITH CARE.

# POWER OFF TO FOLD ELECTRIC SCOOTER

- 1. LIFT UP THE SAFETY LOCK. (FIGURE 1)
- 2. OPEN THE SAFETY LEVER. (FIGURE 2)
- 3. FOLD THE STEM TO THE REAR PART OF THE SCOOTER.
- 4. LIFT THE HOOK BUCKLE ON THE REAR MUD GUARD.
- 5. SECURE THE HOOK AND BUCKLE TOGETHER. (FIGURE 3)
- 6. FOLDING IS COMPLETE. (FIGURE 4)



Figure 1. Safety Lock



Figure 2. Safety Lever



Figure 3. Secure Hook and Buckle



Figure 4. Folding Complete

# TRANSPORT THE DEVICE

# CAUTION

NOTE: AFTER FOLDING, YOU CAN TAKE THE SCOOTER TO THE BUS,
METRO OR VEHICLE CAR TRUNK.

# TRANSPORT THE SCOOTER

LEAVE THE KICKSTAND AT A STABILIZED POSITION.
LIFT THE ELECTRIC SCOOTER FROM THE FOLDING STEM.
CARRY WITH CARE.

# YOU CAN TRANSPORT THE FOLDED BUGATTI ELECTRIC SCOOTER WITH ONE HAND.



# **SAFETY**

# **CAUTION**

NOTE: PLEASE USE PROPER PRECAUTION WHEN OPERATING THE ELECTRIC SCOOTER. DO NOT HANG BACKPACKS OR OTHER OBJECTS ON THE HANDLEBARS WHEN RIDING THE SCOOTER.

1. WHEN THE SCOOTER IS TURNED ON AND NEEDS TO BE MOVED, PLEASE DO NOT PRESS THE THUMB POWER THROTTLE. WALK THE SCOOTER WITH CARE. (FIGURE 1)



Do Not Operate in the Rain

DO NOT DRIVE THE SCOOTER IN THE RAIN.



Proceed with Caution

DO NOT PRESS POWER THROTTLE TO ACCELERATE WHEN GOING DOWNHILL. PROCEED WITH CAUTION.



Avoid Bumpy Roads

DO NOT OPERATE AT HIGH SPEED ON BUMPY ROADS.



Avoid High Steps

DO NOT RIDE OVER STEPS MORE THAN 0.75 INCHES AT HIGH SPEEDS.

# **OPERATE SAFELY**

### CAUTION

NOTE: PLEASE USE PROPER PRECAUTION WHEN OPERATING
THE ELECTRIC SCOOTER.

- 1. HOLD BOTH HANDLESBARS WHILE OPERATING ELECTRIC SCOOTER. DO NOT DRIVE WITH ONE HAND. (FIGURE 1)
- 2. DO NOT LIFT ONE FOOT OR DO OTHER DANGEROUS ACTIONS WHILE OPERATING ELECTRIC SCOOTER.(FIGURE 2)
- 3. DO NOT DRIVE IN WATER WITH A DEPTH OF MORE THAN 0.75 INCHES.(FIGURE 3)
- 4. IF OPERATING THE ELECTRIC SCOOTER AT HIGH-SPEED, DO NOT SWING THE SCOOTER BODY OR TURN THE HANDLEBARS EXCESSIVELY. KEEP SCOOTER STEADY AND OPERATE WITH CAUTION.(FIGURE 4)
- DO NOT STEP ON OR STAND ON THE REAR MUD GUARD WHILE OPERATING THE ELECTRIC SCOOTER. (FIGURE 5)



Figure 1. Hold both Handlebars



Figure 2. Do Not Lift Feet



Figure 3. Do Not Operate in Water



Figure 4. Operate with Caution



Figure 5. Avoid Preasure on Mud Guard

# MAINTENANCE

#### CAUTION

NOTE: ADHERE TO THE MAINTENANCE SUGGESTIONS WHEN THE SCOOTER HAS BEEN IN USE FOR A LENGTHLY TIME.

#### **CLEANING & STORAGE MAINTENANCE**

- 1. USE A SOFT DAMP CLOTH TO WIPE AWAY ANY STAINS. (FIGURE 1)
- 2. STORE ELECTRIC SCOOTER IN A COOL DRY PLACE WHEN NOT IN USE. (FIGURE 2)
- 3. DO NOT LEAVE ELECTRIC SCOOTER OUT IN THE SUN, EXTREME HOT TEMPERATURES OR FREEZING TEMPERATURES AS THIS CAN CAUSE RAPID AGING OF THE OUTER BODY AND TIRES AS WELL AS REDUCE BATTERY LIFE.

#### BRAKE MAINTENANCE

- 1. IF THE BRAKE IS LOOSE, TURN THE ADJUSTING NUT ON IN A COUNTERCLOCKWISE DIRECTION. (FIGURE 3)
- 2. IF THE BRAKE IS TOO TIGHT, TURN THE ADJUSTING NUT IN A CLOCKWISE DIRECTION.(FIGURE 4)



Figure 1. Use Soft Damp Cloth



Figure 2. Cool Dry Storage Area



Figure 3. Fasten Counterclockwise



Figure 4. Fasten Clockwise

# MAINTENANCE

#### CAUTION

NOTE: ADHERE TO THE MAINTENANCE SUGGESTIONS WHEN THE SCOOTER HAS BEEN IN USE FOR A LENGTHLY TIME.

#### TUBE MAINTENANCE

- 1.IF THE TUBE OF THE SCOOTER IS LOOSE, TIGHTEN THE 4 MOUNTING SCREWS IN A COUNTERCLOCKWISE DIRECTION. USE A 2.5MM HEX SOCKET TOOL TO SECURE.(FIGURE 5)
- 2 . TIGHTEN THE TWO SCREWS OF THE STEM BASE IN A COUNTERCLOCKWISE DIRECTION USING A 5MM HEXAGON SOCKET TOOL.(FIGURE 6)

# FOLDING STEM MAINTENANCE

- 5. IF THERE IS A WIDE GAP BETWEEN THE FOLDING STEM, ADJUST THE FOLDING MECHANISM ON THE FOLDING BASE USING A 2.5MM HEX SOCKET TOOL. UNSCREW THE SET SCREW IN CLOCKWISE DIRECTION. (FIGURE 7)
- 6. IN A COUNTERCLOCKWISE DIRECTION, FASTEN THE FOLDING MECHANISM SCREW USING A 3MM HEX SOCKET TOOL. USE A 2.5MM HEX SOCKET TOOL TO TIGHTEN THE SET SCREW.(FIGURE 8)



Figure 5. Secure Front Tube

Figure 6. Secure Stem Base



Figure 7. Remove Screw on Folding Stem



Figure 8. Fasten Folding Mechanism Screw

## PRE-RIDE CHECKLIST

#### CAUTION

NOTE: MAKE SURE THAT THE ELECTRIC SCOOTER IS IN GOOD CONDITION BEFORE EVERY RIDE. IF YOU FIND ANYTHING WRONG DO NOT RIDE BEFORE CORRECTING.

#### **CHECKLIST**



-MAKE SURE THE BATTERY IS SUFFICIENTLY CHARGED BEFORE RIDING.



-ALWAYS WEAR A HELMET BEFORE RIDING.



-WEAR COMFORTABLE CLOTHES AND FLAT CLOSED TOED SHOES BEFORE RIDING.



-READ THE ENTIRE USER MANUAL TO FAMILIARIZE YOURSELF WITH THE ELECTRIC SCOOTER.

### SAFFTY PRECAUTIONS

**A** THE KEY TO SAFE RIDING IS COMMON SENSE.

A OBEY ALL TRAFFIC LAWS.

RIDE DEFENSIVELY, EXPECT THE UNEXPECTED.

A GIVE PEDESTRIANS THE RIGHT OF WAY.

A SLOW DOWN AT INTERSECTIONS AND LOOK TO THE LEFT AND RIGHT BEFORE CROSSING.

▲ DO NOT RIDE TOO FAST

DO NOT OPERATE WHILE INTOXICATED OR

A KEEP YOUR FEET ON THE DECK AT ALL TIMES.

A DO NOT RIDE OFF ROAD OR ON ROUGH SURFACES. AVOID CURBS.

BEND YOUR KNEES WHILE RIDING ON BUMPY OR UNEVEN PAVEMENT TO ABSORB SHOCK AND VIBRATION AND MAINTAIN BALANCE.

#### WARNING



### WARNING

- DO NOT USE ALCOHOL, GASOLINE, KEROSENE, ABRASIVE CLEANING SOLVENTS OR VOLATILE CHEMICAL SOLVENTS TO CLEAN THE ELECTRIC SCOOTER. THIS CAN SERIOUSLY DAMAGE THE FLECTRIC SCOOTER AND CIRCUITRY.
- DO NOT WASH FLECTRIC FLECTRIC SCOOTER WITH WATER.
- IN ADDITION, AFTER CHARGING THE ELECTRIC SCOOTER, NO MOISTURE OR DEBRIS CAN ENTER INSIDE AND DAMAGE THE FLECTRIC SCOOTER.



## **BATTERY WARNING**

- DO NOT OPEN OR DISASSEMBLE THE BATTERY TO PREVENT ELECTRIC SHOCK.
- VOID CONTACT WITH METAL OBJECTS TO PREVENT SHORT CIRCUITS.
- USE ONLY THE CHARGER THAT CAME WITH YOUR ELECTRIC SCOOTER
- AFTER EACH USE, CHARGE THE BATTERY TO PROLONG ITS SERVICELIFE.
- IF NOT USED REGULARLY, CHARGE THE ELECTRIC SCOOTER EVERY 2 MONTHS TO MAINTAIN THE LIFE OF THE RECHARGEABLE BATTERY.

#### WARNING CONTINUED...

- FOR YOUR PERSONAL SAFETY, ALWAYS
   WEAR A HELMET AND BODY PROTECTION.
- COLLISIONS, FALLS AND LOSS OF CONTROL CAN HARM PEOPLE AND OBJECTS AROUND YOU
- TO RIDE SAFELY, YOU MUST READ AND FOLLOW ALL THE INSTRUCTIONS IN THE USER MANUAL
- THIS SCOOTER IS NOT A TOY.
- NOT SUITABLE FOR CHILDREN UNDER 4
  FEET TALL, UNDER THE AGE OF 12 AND/
  OR LINDER 66 POLINDS
- ADULT SUPERVISION IS REQUIRED FOR RIDERS UNDER THE AGE OF 18.
- THE MAXIMUM WEIGHT CAPACITY IS 242 POUNDS.
- PREGNANT WOMEN ARE PROHIBITED FROM RIDING WHICH MAY CAUSE SERIOUS INJURY OR DEATH.
- THIS PRODUCT IS DESIGNED FOR SINGLE PERSONAL USE AND CANNOT TRANSPORT MORE THAN ONE PERSON AT A TIME.

- THIS PRODUCT SHOULD ONLY BE USED IN PRIVATE AREAS AND NOT ON PUBLIC ROADS, PARKS OR FOOTPATHS.
- DO NOT OPERATE IN WET/ICY
  SURFACES OR INCLEMENT WEATHER
  CONDITIONS. I.E.- RAIN, SNOW, MUD AND
  PUDDLES.
- DO NOT OPERATE THIS VEHICLE AFTER CONSUMPTION OF ALCOHOL OR DRUGS, RECREATIONAL OR OTHERWISE.
- DO NOT RIDE WITHOUT PROPER TRAINING, AT HIGH SPEEDS, ON LINEVEN TERRAIN OR ON SLOPES.
- DO NOT USE IN OR NEAR OTHER VEHICLES.
- AVOID USING AT NIGHT OR IN TIMES OF REDUCED LIGHT OR VISIBILITY.
- OWNERS MUST ABIDE BY ALL LOCAL LAWS APPLICABLE TO SCOTER USAGE.
- STORE INDOORS WHEN NOT IN USE.

#### **SPECIFICATIONS**

**BG-CS-09-700 SERIES** 

SIZE & WEIGHT

UNFOLDED 42.75 X 19 X 47.16 INCHES
FOLD 42.75 X 19.01 X 19.09 INCHES

NET WEIGHT APPROXIMATELY 35 LBS(16KG)

RIDING REQUIREMENTS

MAXIMUM LOAD APPROXIMATELY 242 LBS(110KG)

REQUIRED HEIGHT 47.24-78.74 INCHES

MAIN PARAMETERS

BATTERY CAPACITY 36V, 10.4AH

MAXIMUM SPEED 18.6 MPH(29.93 KM/H)

TYPICAL RANGE APPROXIMATELY 20-25 MILES (ACCORDING TO RIDER

WEIGHT AND DIFFERENT ROAD CONDITION)

WHEFI SIZE 9 INCH (FRONT & REAR)

MAXIMUM ANGLE OF CLIMB 15°

OPERATING TEMPERATURE -10-40°C
STORAGE TEMPERATURE -20-50°C
IP RATING IP54

SCOOTER MATERIAL

FRAME MAGNESIUM ALLOY
POLF ALUMINIUM ALLOY

PLASTIC PARTS PC ABS (ANTIFLAMING)

TIRES(FRONT&REAR) 9" FLAT-FREE TIRES(PU FOAMED INNERTUBE)

BRAKE

FRONT MECHANICAL DRUM BRAKE
REAR E-ABS ELECTRONIC BRAKE

BRAKE HANDLING LEFT MECHANICAL BRAKE LEVER

MOTOR

TYPE BRUSHLESS DC MOTOR (REAR DRIVE)

RATED POWER 300W MAX. POWER 600W

**BATTERY** 

TYPE 18650 LITHIUM BATTERY CELLS

NOMINAL VOLTAGE 36 VDC
CHARGING VOLTAGE 42 VDC

NOMINAL CAPACITY 360WH(36V, 10.4AH)

MAX. CONTINUOUS 15A

DISCHARGE CURRENT

CHARGING HOURS APPROXIMATELY 4 HOURS

CHARGING TEMPERATURE 0-40°C

BMS (BATTERY OVER-HEATING, SHORT CIRCUIT,

MANAGEMENT SYSTEM) OVER-CURRENT AND OVER-CHARGE PROTECTION

CHARGER

OUTPUT VOLTAGE DC 42V 2A

INPUT VOLTAGE AC 100-240V~ 50/60HZ

OUTPUT CURRENT 2A

LIGHT

FRONT LIGHT LED LIGHT 12V
TAIL LIGHT LED LIGHT 12V

DUAL TURNING SIGNALS ON HANDLE GRIP AND REAR FENDER

AMBIENT LIGHT LEFT AND RIGHT SIDE LOGO PROJECTION LIGHT ON REAR FENDER

**OTHER FEATURES** 

BELL LEFT THUMB MECHANICAL BELL
RIDING MODE 1. SPEED LIMIT MODE (9MPH)

1: SPEED LIMIT MODE (9MPH)
2: STANDARD MODE (12.5MPH)

3: SPORT MODE(18.6MPH)

CRUISE CONTROL LONG-PRESS OF THE POWER THROTTLE FOR MORE

THAN 6 SECONDS

LED DISPLAY DISPLAYS SPEED, MODE, BATTERY POWER,

CRUISE CONTROL AND HEADLIGHT.

CERTIFICATIONS UL 2272/CE/FCC/IP54

#### **DECLARATION**

1:AN ELECTRIC SCOOTER IS A SPORT AND ENTERTAINMENT TOOL, NOT A TRANSPORTATION VEHICLE. HOWEVER ONCE YOU DRIVE IT INTO A PUBLIC AREA, IT WILL ALSO HAVE THE PROPERTY OF A TRANSPORTATION VEHICLE, AND YOU NEED TO LEARN TO MASTER RIDING SKILLS. WE SHALL NOT BE LIABLE FOR ANY CASUALTIES OR LOSSES CAUSED BY DRIVERS' INFXPERIENCE OR FAILURE TO FOLLOW THE INSTRUCTIONS IN THIS USER MANUAL.

2:PLEASE ACKNOWLEDGE A PEDESTRIAN'S RIGHT OF WAY WHEN OPERATING THE SCOOTER. SLOW DOWN WHEN PASSING BEHIND PEDESTRIANS, STAY ALERT DURING DRIVING, DRIVE AT LOW AND MEDIUM SPEEDS ON UNCONVENTIONAL COMPLEX ROADS SUCH AS POTHOLES AND SMOOTH SURFACES, AND MAINTAIN A REASONABLE AND SAFE DISTANCE FROM OTHERS AND VEHICLES.

3:WHEN DRIVING IN COUNTRIES AND REGIONS WHERE THERE ARE NO RELEVANT NATIONAL STANDARDS AND REGULATIONS FOR ELECTRIC SCOOTERS, YOU MUST STRICTLY ABIDE BY THE SAFETY REQUIREMENTS OF THIS MANUAL FOR RIDERS. THE MANUFACTURER IS NOT RESPONSIBLE FOR DIRECT AND JOINT LIABILITIES FOR ALL FINANCIAL, PERSONAL LOSSES, ACCIDENTS, LEGAL DISPUTES, AND ALL OTHER UNFAVORABLE EVENTS THAT CAUSE CONFLICTS OF INTEREST CAUSED BY THE USE BEHAVIORS THAT VIOLATE THE INSTRUCTIONS IN THIS MANUAL.

4:REFRAIN FROM ALLOWING THE USE OF THE ELECTRIC SCOOTER TO ANYONE WHO IS NOT EXPERIENCED WITH OPERATING IT. PLEASE WEAR SAFETY PROTECTIVE GEAR BEFORE USE.

5:PLEASE PERFORM A BASIC INSPECTION OF THE ELECTRIC SCOOTER BEFORE EACH DRIVING TRIP. IF YOU FIND ANY ABNORMALITIES SUCH AS OBVIOUS LOOSE PARTS, SIGNIFICANTLY REDUCED BATTERY LIFE, SLOW TIRE LEAKS OR EXCESSIVE WEAR, ABNORMAL STEERING NOISE OR MALFUNCTION, PLEASE STOP USING IT IMMEDIATELY AND POWER OFF. DO NOT DRIVE FORCIBLY. AND PLEASE CONTACT THE AFTER-SALES SERVICE PHONE TO OBTAIN PROFESSIONAL GUIDANCE OR REPAIR AND MAINTENANCE SERVICES.

6:DO NOT USE ALCOHOL, GASOLINE, KEROSENE OR OTHER CORROSIVE CHEMICAL SOLVENTS TO CLEAN THE ELECTRIC SCOOTER, AND IT IS FORBIDDEN TO USE A PRESSURE GUN TO SPRAY AND WASH, OTHERWISE IT MAY GET AN ELECTRIC SHOCK OR CAUSE SERIOUS FAILURE DUE TO INTERNAL WATER.

7:DO NOT USE OTHER TYPES OR BRANDS OF BATTERY PACKS, DO NOT TOUCH THE BATTERY CONTACTS, AND DO NOT DISASSEMBLE OR PUNCTURE THE SHELL. AVOID METAL OBJECTS CONTACTING THE BATTERY CONTACTS AND CAUSING SHORT CIRCUITS. OTHERWISE, IT MAY RESULT IN BATTERY DAMAGE OR PERSONAL INJURY.ONLY USE THE ORIGINAL CHARGER TO CHARGE, OTHERWISE THERE IS A DANGER OF DAMAGE OR FIRE.

8:DO NOT PLACE THE ELECTRIC SCOOTER OR ITS BATTERY PACK IN A CAR EXPOSED TO EXCESSIVE HEAT FROM HIGH TEMPERATURES. IT IS FORBIDDEN TO PUT THE BATTERY PACK INTO A FIRE, OTHERWISE IT MAY CAUSE THE BATTERY TO FAIL, OVERHEAT, AND EVEN CAUSE A RISK OF FIRE. WHEN DON'T USE SCOOTER FOR MORE THAN 30 DAYS, PLEASE FULLY CHARGE IT FIRST, STORE IN A COOL AND DRY PLACE, AND FULLY CHARGE IT EVERY 60 DAYS, OTHERWISE THE BATTERY MAY BE DAMAGED AND THIS DAMAGE IS NOT COVERED BY THE WARRANTY.

9:ONLY USE THE PARTS AND ACCESSORIES APPROVED BY US, PLEASE DO NOT MODIFY YOUR ELECTRIC SCOOTER WITHOUT AUTHORIZATION. DAMAGE TO THE ELECTRIC SCOOTER CAUSED BY UNAUTHORIZED MODIFICATION IS NOT COVERED BY THE WARRANTY. WEWILL NOT BEAR ANY RESPONSIBILITY FOR PROPERTY LOSSES, PERSONAL INJURIES, ACCIDENTS, ETC. CAUSED BY UNAUTHORIZED MODIFICATION.

## HIGHLIGHTS







36V/10.4 AH LITHIUM ION







## HIGHLIGHTS













## WARRANTY



# FOR WARRANTY INFORMATION, PLEASE VISIT US AT BUGATTISCOOTERSNA.COM

90 DAY LIMITED WARRANTY

#### **FCC STATEMENT**

NOTE: THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION.

THIS EQUIPMENT GENERATES, USES AND CAN RADIATE RADIO FREQUENCY ENERGY AND, IF NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS. HOWEVER, THERE IS NO GUARANTEE THAT INTERFERENCE WILL NOT OCCUR IN A PARTICULAR INSTALLATION.

IF THIS EQUIPMENT DOES CAUSE HARMFUL INTERFERENCE TO RADIO OR TELEVISION RECEPTION, WHICH CAN BE DETERMINED BY TURNING THE EQUIPMENT OFF AND ON, THE USER IS ENCOURAGED TO TRY TO CORRECT THE INTERFERENCE BY ONE OR MORE OF THE FOIL OWING MEASURES.

- · REORIENT OR RELOCATE THE RECEIVING ANTENNA.
- INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER.
- CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED.
- CONSULT THE DEALER OR AN EXPERIENCED RADIO/TV TECHNICIAN FOR HEI P.









- for -



# BYTECH\*

2585 WEST 13TH ST BROOKLYN, NY 11223 BYTECHINTL.COM ©2022 BYTECH NY INC

# BUGATTISCOOTERSNA.COM

MANUFACTURED BY BYTECH NY INC. THE BUGATTI LOGO AND BUGATTI WORDMARK ARE TRADEMARKS OF BUGATTI INTERNATIONAL S.A. AND ARE USED UNDER LICENSE.